

Basic Clock – Power and Network connections

Open the clock by removing the Phillips screw at the bottom of the clock and remove the back of the clock. In the picture below, note the colored arrows.

Red Arrow – This is where you can connect the AC power adapter supplied with the clock.

Blue Arrow – This is where you can connect an Ethernet cable to give the clock access to your network and the internet. See the Asure Basic WiFi link for instructions on how to have the clock connect to the internet via WiFi.



Basic Clock – Mounting the clock

To mount the clock, see the image below. You can use screws or nails attached to the location you wish to mount the clock. Any of the holes marked with a red line can be used. A mounting height of 50-55 inches is usually a good height to use. Be sure to use appropriate dry wall anchors as needed.

The cords for the AC adapter and Ethernet can enter the clock through the opening in the bottom of the case marked with a blue arrow.

